

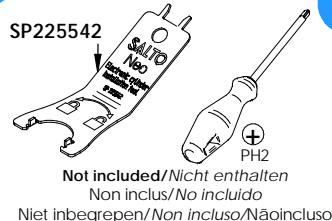
 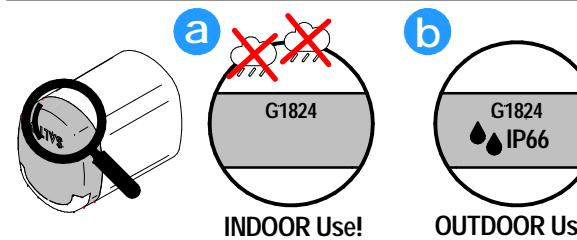


Eng Installation guide
D Montageanleitung
F Guide d'installation
E Guía de instalación

N x A1 1x.. series

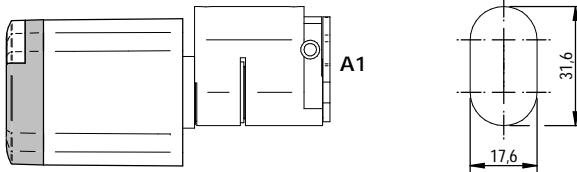

SALTO Recommended Batteries SP01926-5



SALTO Neo

225826-ED - 19/06/2020

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.

A1

Eng Installation

D Montageanleitung


F Installation

E Instalación


1




1.1

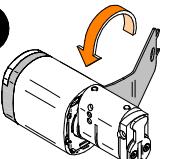


2

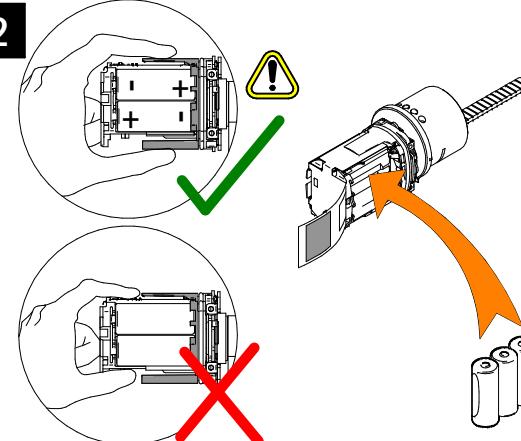


1.2

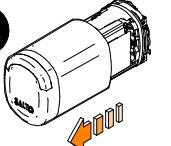


3

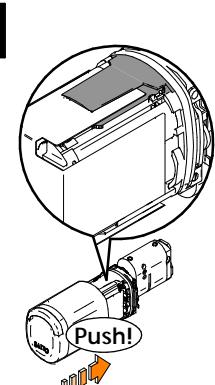


4

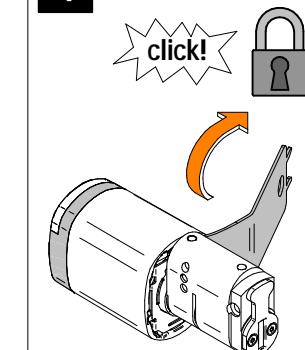


6

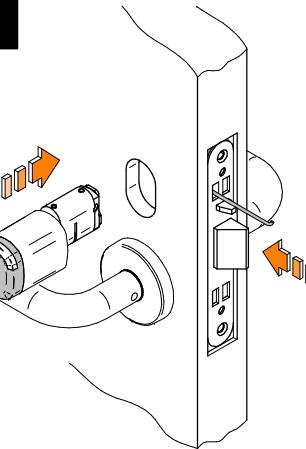

7

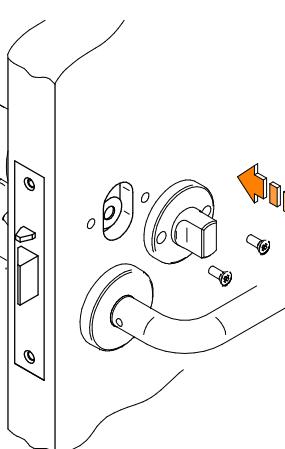

8

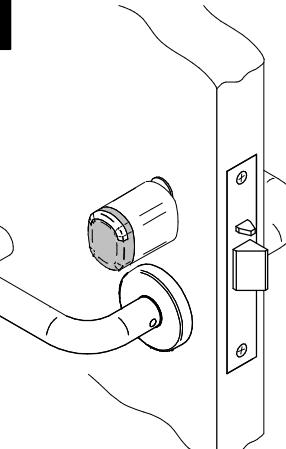

AT THIS POINT DO NOT CLOSE THE DOOR
PROGRAM THE CYLINDER FIRST

NE FERMEZ PAS LA PORTE.
PROGRAMMEZ LE CYLINDRE AVANT.

EN ESTE PUNTO NO CIERRE LA
PUERTA, PROGRAME PRIMERO EL
CILINDRO

Eng Battery change

D Batterie tauchen


F Remplacer les piles

E Cambio de pilas


1





2

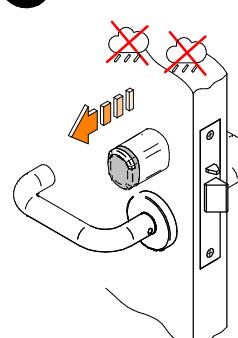

3

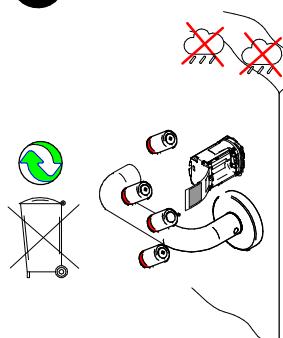





4

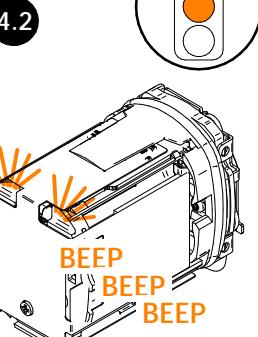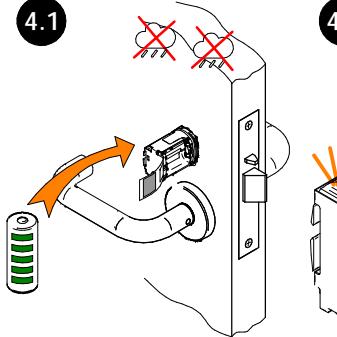

5



6

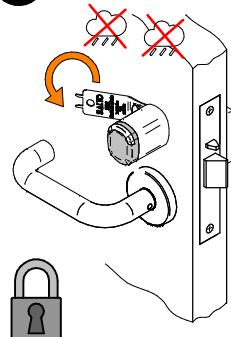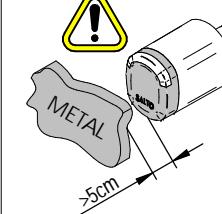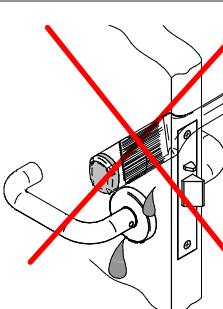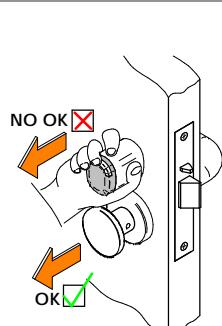**Eng** Installation and use recommendations**E** Consejos de uso e instalación**D** Empfohlene Handhabung und installation**F** Recommandations d'utilisation et d'instalaltion**Eng** Do not place any movable metallic object closer than 5cm in front of the reader.**D** Platzieren Sie keine beweglichen Metallteile näher als 5 cm vor dem Leser.**F** Ne placez aucun objet métallique mobile à moins de 5 cm du lecteur.**E** No colocar ningún objeto móvil metálico delante del lector a menos de 5cm de distancia.**Eng** The knob is uniquely paired to the cylinder, and will not work if you switch in a different SALTO cylinder.**D** Der Knauf ist eindeutig mit dem Zylinder gekoppelt und funktioniert nicht, wenn Sie einen anderen SALTO-Zylinder verwenden.**F** Le bouton du lecteur SALTO est appaire au cylindre. Le cylindre ne fonctionnera pas si vous l'inversé avec un autre cylindre SALTO.**E** El pomo está emparejado únicamente al cilindro, no funcionará si lo conecta a otro cilindro SALTO diferente.