
1. Front Body (Front Body, installation on the outside of the door)



4. Main Body (Main Body, installation on the inside of the door)

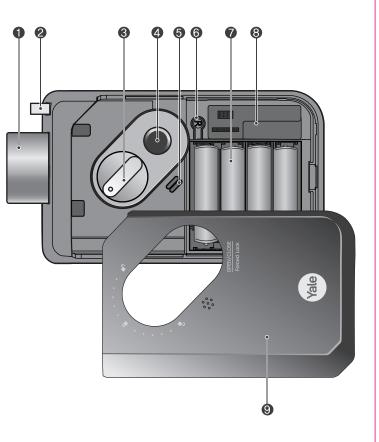

7. Setting Menu

	Touch the Keypad of the Front Body with your palm to begin
*	Press Ӿ button on the Keypad
#	Press # button on the Keypad
\bigcirc	Press (R) (Registration) button in every steps to start or complete the session
CARD	Enter User RFID Key Tag (Up to 100 Users)
PIN CODE	Enter User Code (4 ~ 10 digits) The User code is used for unlocking the lock. (Up to 100 Users)
M PIN CODE	Enter Master Code (4 ~ 10 digits) The Master code is managed by certain person who is in charge of controlling the lock, and used for setting up the features.
V PIN CODE	Enter Visitor Code (Only 4 digits) The Visitor code is different from user code and given out to visitors only.
O PIN CODE	Enter Onetime Code (Only 4 digits) The Onetime code is used only once for unlocking the door lock and automatically deleted after usage.
UN	User Slot Number should be 2 digits (like '01' '99' and '00': Location of 100th user slot must be assigned "00" instead of "100".)
	Rotation area to add more features when entering 🛨 button

9. Normal Mode (Default Mode)

Normal mode is for convenient mode for anyone with user code to change various settings

1	12 (Registr	ation pr	ocess)				*	Contin	ue/Œ) Com	plete
	1	2	3	4	5	6	7	8	9	10	11	12
User C	ode	-									Only 1	User
Registr -ation	R	New	R									
RFID H	(ey Ta	g								Up 1	to 100 L	Jsers
Registr -ation	R	CARD	Repea require		R							
Visito	Code	•									Only 1	User
Registr -ation	PINCODE	R		#		#	V PIN CODE	#	*	R R		
Delete	PIN CODE	<u></u>			3	#	U	#	*	R R		
Onetir	ne Co	de					Only 1 U	ser, Aut	tomatic	ally dele	eted afte	er use
Registr -ation	U	(R)	2	#		#	PENCODE	#	*	R R		
Delete	PIN CODE				3	#	U PIN CODE	#	*	R R		
Delete	Delete All RFID Key Tags Credentials											
Delete	PIN CODE	lacksquare	3	#	PIN CODE	#	*	R R				
Autom	natic L	.ock										
Enable	U	(R)	4	#	2	#		#	*	OR R		
Disable	PIN CODE		لط	+++	٧	**	3	#	*	R R		

 
10. Unlocking Door with RFID Key Tag



RFID Key Tag.

11. Unlocking Door with Code







* button

12. Unlocking Door with Smart Etiquette.



Palm touch for 3 sec.

Enter the User PIN Code then touch the keypad with your Palm

 


Enter the RFID Key Tag on the reader

2. Basic Contents

Basic Contents









•RFID Key Tags X 4

Screws

•Installation Guide

Optional Accessories

Lock Case



Strike Plate

3. Specifications

Parts		Specifications	Remarks		
	Front Body	62(W) X 179.8(H) X 18(D) mm PC/Die-Casting	Operating temperature:		
	Main Body	142.1(W) X 87.1(H) X 36.4(D) mm PC/Die-Casting	-15 ~55°C (5 ~131°F)		
Type of Product		Direct current, Temperature Sensor, Not fire resistant, Key is not available, Deadbolt type door lock (D-NF-T-NK-S)			
Option	Remote Controller	Wireless	Optional		
	Bluetooth Module	Wireless security system	Optional		

- ${\tt \#}$ Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of battery used.
- $\ensuremath{\mathbb{X}}$ Please make sure that all parts are included when purchasing the product
- * Optional products may not be available depending on your country or local dealer

5. Front Body

U	Keypad(10-key)					
2	Dead Bolt Jam Lamp					
3	Emergency Power Supply Terminal					
4	Low Battery Indicator					
6	S Reset Hole					
6	RFID Key Tag reader					

6. Main Body

Battery Cover

0	Dead Bolt
2	Automatic Locking Sensor
3	Thumb Turn Lock
4	Open/Close Button
6	Speaker
6	Registration Button
7	1.5V AA Alkaline Batteries (4PCS)
8	Module Accessory Slot (Optional)

8. Product Features

Yale Access App

3 minute Lock Out Feature ...

After five (5) unsuccessful attempts of an invalid code or RFID key tag, lock out mode

Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.

RFID key tags and fingerprints from outside when setting up functions indoors.

External Forced Lock

when setting up functions outside.

- Remote Controller (Optional):
- This option may not be available depending on your country or local dealer.
- · Low Battery Alarm and Emergency Power Supply.

Yale Access gives you the peace of mind of knowing who and what you love is safe - no matter where you are-just at the touch of your smartphone.

Smart Touchpad - Auto Lock

The door Locks when you touch the palm on the keypad.

is activated for 3 minutes.

Smart Etiquette

When entering a pin code on the keypad, the user can open the door lock in silent mode.

Fake PIN Code

It is a security-enhancing function that 'disables' authentication methods such as passwords,

It is a security-enhancing function that an alarm goes off if someone opens door from inside

Other features and Benefits -

- Network Module/Controller (Optional):
- It allows door lock to connect with Home network controller.
- Intrusion/Broken Alarm.

Volume Control 7 # **X** OR **R** U R 4 # 3 # 2 # ***R 3 # **X** or **R** Bluetooth setting (Yale Access app) U R 7 # Set up a new device in the app Up to 5 Users Remote Controller 3 # U # X or R Home Network Controller U R 9 # **Remote Controller** Set with registration button located on the top of remote controller.

 
You can press it using a pin like the one shown in the image.

Please note following when pairing lock with Yale Access App.

- Depending on product type or FW version, app registration and door lock connection in normal mode may not be possible, so if registration is not possible, change from normal mode to master mode and try again.

 [App Registration in Master Mode: Master Pin Code-> R (Registration Button)-> 7-> #]
- Because Yale Access Bluetooth App is only available in master mode, user code automatically changes to master code when registering APP in normal mode.
- Please be informed that all registered credentials will be deleted when changing mode or registering and deleting app.

13. Unlocking the door from inside



Opening the door with Thumb Turn Knob

The door will be open by turning the Thumb Turn Knob into opening direction.

14. Locking the door

Automatic Lock Mode (Default) -

The door will be automatically locked within 5 seconds.

Locking the door from outside when the lock is set on manual locking mode



Locking the door from inside when the lock is set to manual locking mode \cdots

The door will be locked by turning the Thumb Turn Knob into closing direction.



The door will be locked by pressing O/C button.

15. External Forced Lock

Enable External Forced Lock: RFID Key Tag



Contact RFID key Tag on [RFID key tag reader] for 5 seconds until you hear 3 beeps.

Enter the #

Enable External Forced Lock: User Code





Disable External Forced Lock













touch button for 5 Sec

When the door is unlocked from outside based upon proper authentication, the External forced lock is will be released

16. Internal Forced Lock

Enable Internal Forced Lock



By continuously pressing the O/C button for 5 seconds the internal forced lock will be activate after 3 'beeping' sound.

Disable Internal Forced Lock



By continuously pressing the O/C button for 5 seconds the internal forced lock will be deactivate after 3 'beeping' sound.

20. Power supply

One-on-one real life size 1.5V(LR6) Alkaline AA Battery

It may sustain 1 year if used 10 times a day. (Users are advised to use authentic Alkaline batteries.) * Kindly dispose used batteries.

You must replace all 4 batteries in the following cases:

- * The Low Battery LED on keypad flickers red.
- * When low battery notification message is played.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE NATIONAL CODE OR RECYCLING PROGRAM

21. Emergency power supply for discharged batteries







touch





and Plam touch




RFID Key Tag

23. Master Mode

Automatic Lock


Master mode is a mode in which only the administrator can set the door lock and provide access to other users. 100 Users passwords, 100 Users RFID key tags and individual registration and deletion of one-time passwords enable efficient management of visitors and users.

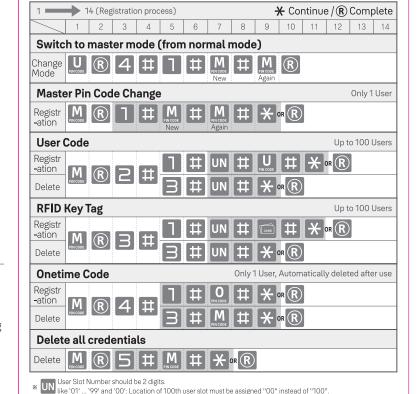


24. Important notes



 Do not install the digital door lock in an outdoor environment.



 Do not attempt to disassemble the digital door lock by yourself.




Do not spray water directly or wipe with chemicals such as benzene, gasoline or alcohol.



Do not use force with a tool onto the product.



 When using, remember that someone else can see the password.



Make sure the door is closed properly when going out.

User Guide

RFID Key Tag / PIN Code

Part of ASSA ABLOY

17. Alarm

Intrusion Alarm: The alarm goes off when someone forces the door open. For example, In case of an intrusion by opening a gap in the door while the door is locked.

Broken Alarm (Breakage Alarm): The alarm goes off when the front part is completely separated from the main set. For example, forced removal of external product (front body).

High temperature alarm

In case of fire emergency, the digital door lock detects high temperature and automatically unlocks the digital door lock.

Turn off Alarm

- Enter the registered User Code.
- Press the (R) button for 5 seconds.
- Enter the registered RFID Key Tag.

18. 3 Minute Lock Out

All access mode from the external side are disabled for 3 minutes to deter unauthorized access.

Disable 3-minute Lock Out

- Press the Open/Close button.
- Press (R) button.

19. Unlocking Door with Fake Code

There is no limitation for digits of Fake Pin Code.



touch

















22. Code Chart Duplicate if necessary

	PIN Code Management(Up to 100 Users.)						
User Type	User Name	PIN Code					
Master							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							
User							

M R 6 # 2 # Volume Control 7 # * or R High Low M R 6 # 3 # 2 # * • R 3 # * or R Mute **Bluetooth setting (Yale Access app)** Registr M R 7 # Set up a new device in the app **Remote Controller** THUN # SET # X OR R 3 # UN # * or ® **Home Network Controller** # Cont # * OR R -ation R 9 # Switch to normal mode (from master mode) Change M R 5 # 7 # U # UNICOSE R * All registered passwords and other credentials will be deleted when mode is changed. ** Please install(register) the network module when you want to use a remote control or home network

25. Safety and Warning

- Do not install the digital door lock in an outdoor environment.
- Do not attempt to disassemble the digital door lock by your self. By doing so, you may get an electronic shock and damage the product.
- Do not use force with a tool onto the product.
- · Make sure to lock the door tight when you go out.
- Be careful not to hit the handle as it may cause injuries.
- Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.
- · It is recommended to change User Code on a regular basis.
- •In manual lock mode, make sure to double check whether the door is securely locked.
- ·When External Forced lock is set and unlock the door, the alarm will be activated.
- Do not use rechargeable batteries. Only alkaline batteries are recommended.
- Make sure to follow the above instructions to avoid any injuries.
- ·It cannot be guaranteed in a special conditions & environment such as water condensation, seaside.
- · Warranty will not cover- exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications, unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles.

PLEASE READ INSTRUCTIONS BEFORE USE. The functions and design of this product can be changed without prior notice for performance and quality improvement



Packaging of this product can be recycled.



WEEE Note: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.
Check your local authority or retailer for recycling advice.

ISL-1963-00-001